


WindowSeal Installation Instructions Over Housewrap

Note: Polyguard WindowSeal becomes a secondary system over Housewrap.*


We recommend rolling our tape on with a hard hand roller (these are available from Polyguard at a nominal price).

Cold Weather Application- Use Primer or Mechanical Fasteners. *Ex.: Plastic Caps or Brick Ties*


ROLL IT ON ROLL IT ON

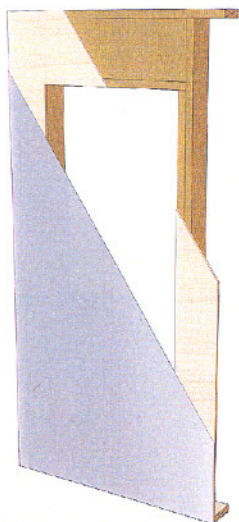


STEP 1
WOOD FRAME WALL WITH OSB
AND HOUSEWRAP

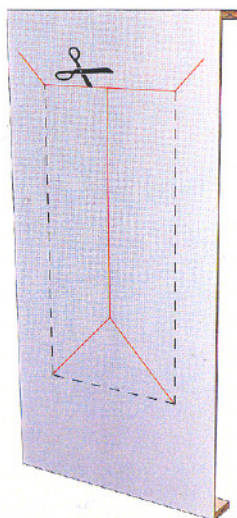


STEP 2
MODIFIED "I" CUT IN HOUSEWRAP

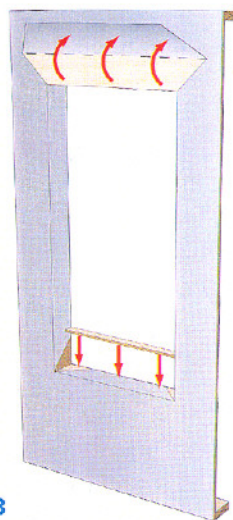


STEP 3
HOUSEWRAP FOLDED IN AT JAMBS AND
SILL. HOUSEWRAP AT HEAD TEMPORARILY
FOLDED UP OR, ALTERNATIVELY,
TUCKED UNDER; INSTALL BACKDAM

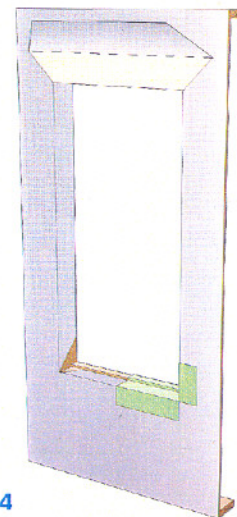


STEP 4
INSTALL FIRST PIECE OF ADHESIVE-
BACKED SILL FLASHING

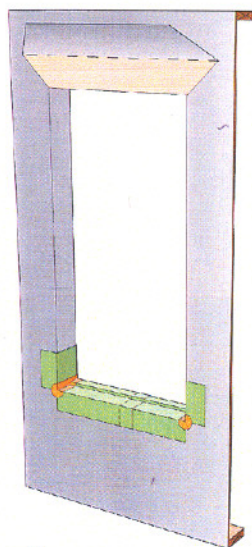


STEP 5
INSTALL SECOND PIECE OF
ADHESIVE-BACKED SILL FLASHING
AND CORNER FLASHING PATCHES
AT SILL

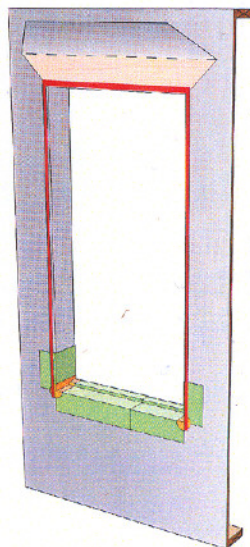

STEP 6
APPLY SEALANT AT WINDOW JAMBS
AND HEAD; ALTERNATIVELY, SEALANT
CAN BE PLACED ON THE BACK SIDE OF
THE NAILING FLANGE (BACK-CAULKED);
SEALANTS, HOUSEWRAPS AND FLASHINGS
MUST BE CHEMICALLY COMPATIBLE

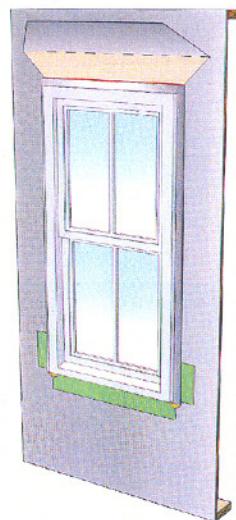

STEP 7
INSTALL WINDOW PLUMB, LEVEL AND
SQUARE PER MANUFACTURER'S
INSTRUCTIONS

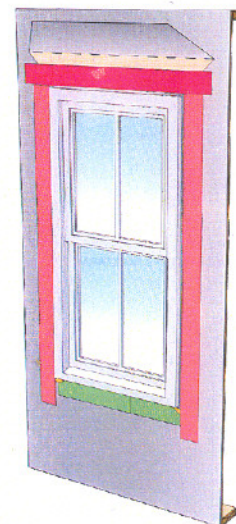

STEP 8
INSTALL JAMB FLASHING FIRST; INSTALL
A DRIP CAP (IF APPLICABLE); INSTALL
HEAD FLASHING

Note: The above instructions are taken from the EEBA Water Management Guide, and are consistent with instructions of most house wrap manufacturers. Polyguard asks you to note that, if these instructions are used, the Polyguard WindowSeal becomes a secondary waterproofing system, after the house wrap. If you wish to have the added certainty of Polyguard as the primary window waterproofing system, we recommend that between steps 2 and 3 of the above procedure, you install Polyguard WindowSeal directly on the sills, joints and head as shown in the regular WindowSeal installation procedure found at www.polyguardproducts.com.